

# TriMetric™ TM-2030

## Battery system monitor, Models TM-2030-RV and TM-2030-A Technical Manual

### INSTALLATION Page 1-7 USER GUIDE Page 8-23

revised June 2017

**IMPORTANT:** The wiring installation for this meter, especially the shunt installation must be performed by someone knowledgeable in proper wiring, electrical practices, and safety. If you do not have this knowledge please have someone install it who does, or at least get some competent help to supervise the installation.

#### To install:

1. Please read or scan two pages of introductory information in section A.
2. Consult drawings Figure 1 and 2 (pages 7-8).
3. Follow step by step installation instructions in section B.
4. Program the two most important parameters into meter (section C1).

#### A. Before installing the TriMetric meter:

#### B. How to Install Meter and Shunt:

C1. How to determine program item P3: “battery system capacity”

C2. How to program your meter for the 100A/100mV shunt.

C3. Optional: Now or later you may wish to program P4, P5, P6

#### Warranty and customer service

##### Limited warranty

The TriMetric TM-2030 is warranted for three years against any manufacturing defect. Any meter not meeting the specification or rated performance shall be replaced or repaired, at Bogart Engineering’s discretion, provided it has not been subjected to abuse or misapplication. For warranty service, please email [bogart@bogartengineering.com](mailto:bogart@bogartengineering.com). A return merchandise authorization is required for all merchandise to be returned to Bogart Engineering.

##### How to obtain customer service

Please review our support page before attempting to contact us. Our distributors are able to answer simple questions about Bogart Engineering products. For technical support, send an email to [bogart@bogartengineering.com](mailto:bogart@bogartengineering.com) and someone will assist you.

**BOGART ENGINEERING**

[www.bogartengineering.com](http://www.bogartengineering.com)

## **A: What you may need to know before installing the TriMetric meter.**

**Review this (briefly) before installing.**

The TriMetric is usually located in the living area where people using the power can readily observe it. It is usually located less than 100 ft from batteries. For greater distances refer to section B2 for details. If the optional SC-2030 Solar charger is also to be used, the charger is typically located near the batteries where it can be completely controlled from the TriMetric TM-2030.

**The TM-2030 measures volts, amps, watts, percent full on your “main” system.** In addition, it will monitor *voltage only* on a second battery having a common negative connection, which could be the engine starting battery.

**Permissible battery voltage:** This meter is suitable for battery systems with nominal voltage from 8 to 65 volts. *It should not be connected to systems which will ever exceed 65 volts.*

**You may choose three different operating levels from simplest to more complex:** The meter comes initially programmed at the lowest Operating Level: L1 which will furnish the most important data. There are also levels “L2” or “L3” which add more functionality, but with more complexity. For new users, begin with L1, and after becoming familiar with the meter advance to L2 or L3 later at any time. L4 adds (only) a more stringent requirement for what is considered to be “charged,” intended mainly when using the optional SC-2030 solar charger. These levels are described in the TriMetric User’s Instructions.

**Lightning considerations:** The meter has been designed with good protection against lightning.

**It is possible to wire the TriMetric so it reads *only* total solar input current, or only total load current (and amp-hours):** In this case refer to our web site: BogartEngineering, SUPPORT/APPLICATION NOTES” entitled : Using TriMetric for measuring only wind or solar charging source.

**Serial data output is available for all real time data—** This is a data access method for techies. See application note on the Bogart Engineering web site under SUPPORT/APPLICATION NOTES entitled: TM-2025-TM-2030 Technical Information on Serial Data Output

**Mounting the meter:** There are two versions of the TM2030 which differ only in their size, front label colors and whether the meter includes its own enclosure.

**The TM-2030 RV model comes in a white, surface mount enclosure** (3 x 4-1/4 x 1-1/4 inch deep). It can be mounted to a wall with screws at the top and bottom flanges.

**The TM-2030 A can be mounted** in many standard “double gang” electrical boxes available in hardware stores.

For detailed drawings, see **application** notes on the **Bogart Engineering** web site under **SUPPORT/APPLICATION NOTES**: “**Mounting Drawings** for .TM-2020/TM2030.”

**A shunt (an accurate, very low resistance power resistor) must be wired into your battery system as described in section B of these instructions,** shown on the wiring diagram page 8. The “amps” shown on the meter measures whatever current passes through this shunt—so it must be wired in series with the wire which carries the current to be measured. **The shunt is almost always installed between the negative terminal of the battery and all the loads and charging sources** (see Figure 1 on page 7.) It is located near the batteries, since the high current carrying wires must be kept short. The TriMetric meter measures the current (“amps”) by measuring the very small voltage drop across this shunt. The voltage drop across the shunt is very small—with the 500A/50mV shunt it is equivalent to only a 2 foot additional length of 0000 gauge cable in series with your main wiring.

**TriMetric maximum current capability:** The TriMetric meter itself will measure current (amps) properly up to 999 amps with a 500A/50 mV shunt. With the 100A/100 mV shunt the meter measurements will be OK up to 300 amps. However, **at these currents the shunt is going to get too hot.** The typical 500A/50mV shunt will be OK up to 420 amps. The typical 100A/100A shunt will be OK up to 70 amps maximum. These are charging or discharging amps values, NOT amp hour numbers.

### **MORE SHUNT INFORMATION**

**There are two choices of shunt, depending on your system size: the 500A/50mV or 100A/100mV size.** Most systems will use the 500 amp-50 mV shunt. This gives an “ampere” resolution as low as 0.1 amp and will read to a steady 430 amps before the shunt overheats. For smaller systems (with 12V systems with inverter 800 watts or less) you could use a 100A/100mV shunt It has the advantage that you can read currents as low as 0.01 amp, however has the 70 amp maximum amp limitation noted above. The correct shunt must be programmed as described in section C2 on page 6

**Technical note:** It is only the shunt *ratio* between amps to mV. which is important to the meter--so, for example, a 200 amp-200 mV. shunt can, from the meter's point of view, be considered equivalent to the 100 amp-100 mV shunt. The implication, when a shunt is rated at "100 amps-100 mV." is that it may safely carry *up to* 100 amps maximum--however in many cases so-called "100 amp" shunts will not carry this much without overheating. For more information see application note on the **Bogart Engineering** web site under **SUPPORT/APPLICATION NOTES** entitled: **Shunt Info.**

## B. How to Install METER and SHUNT

### B.1. Preliminary

- IMPORTANT:** A qualified person familiar with safe electrical practices and the local electrical code should install this meter--particularly when installing the shunt. **Accidentally shorting the battery with a tool or other metal such as a finger ring can result in severe burns from an arc. Mistakes in wiring could seriously damage your electrical system.**
- Refer to wiring drawing on last page--please read all notes.
- To prevent damage to meter, do not install into a battery system that has a voltage that will rise above 65 volts. It is designed for a maximum “nominal” 48 volt battery system.
- A (1Amp, fast-blow) fuse shown located *near the battery* for each battery in the wiring diagram will protect the wire and the meter even if you accidentally miswire to the terminal block.. If not provided with your meter, such "in line" fuses are available at Radio Shack and other electrical supply stores.

### B.2:For installation you will need:

- Suitable wrench or tools for connecting the large cables to battery and shunt
- Very small screwdriver for connecting wires to terminal block on the back of the TM-2030.
- Small Phillips screwdriver for removing front panel of meter
- Medium screwdriver for connecting wires to shunt
- For TM-2030-RV only: A drill for making a small hole to allow wires to enter the meter box
- For TM-2030-A only: A “double gang” electrical box of suitable size to accommodate the meter panel.
- One shunt (usually 500A/50mV size). This is the sensor that measures the “amps”.
- “shunt to battery cable:” Prepare or obtain from an electrical supply or auto store a “shunt-battery cable” (about 6 inches to several feet long as needed,) with diameter at least as large as the largest cable going to the negative battery connection. The cable size must be large enough to accommodate the maximum system charging or discharge amps from the battery. It should have suitable bolt lugs at each end. One end will connect to one large bolt on the shunt—the other end to the battery negative post. See Figure 1 on page 7.
- **Small, 4 or 5 wire cable long enough to connect from meter to battery system—with one or two 1Amp fuseholders:** Virtually any multi conductor cable available in a hardware or electrical supply house will be OK, including CAT5. Or 4 or 5 individual wires may be used. Required wire size shown next paragraph. (Five wires if two batteries are being measured.) **The wire used for the + connection of both the main (and secondary battery if used) should each have a 1A fuse at the battery end** to protect against a short in the wire.  
**Minimum size wire** for distances shown: #26 gauge: 45 feet. #24 gauge: 70 feet. #22 gauge: 110 feet. #20 gauge: 180 feet. #18 gauge: 300 feet.  
**For long runs over 100 feet our website has an application note describing how to use Cat 5 cable** for going up to 350 feet. See the **Bogart Engineering** web site under **SUPPORT/APPLICATION NOTES** entitled: **Using CAT5 cable up o 350 ft. for TriMetric.**

### B.3: Eight steps to install shunt and meter:

Steps 1-3: Install Shunt

Steps 4-6: Connect wires from meter to shunt and batteries.

Step 7: Check of wiring.

Step 8: Install two program values for your system

**STEP 1:**Turn off main breaker to battery. **Check figure 1 on page 7 to see how the shunt will be connected when you complete step 3.** Remove **EVERY** wire and **EVERY** cable connected to the **negative** side of your battery system. After you have accomplished this step you will be left with one or more dangling cables that will be reconnected to the shunt in STEP 2. **A common error is to leave one or more still connected.**

**If your system has one battery, or if you have two (or more) batteries in series,** then before step 2 you will have one negative pole (on one battery) that should be **completely bare, disconnected** from **any** (current carrying) wires or cables, such as chassis ground.

If your system has four 6V batteries in series-parallel, or two 12V batteries in parallel, then on the negative side of the battery system you will then have **only one** cable connecting two negative poles from two different batteries connected together. Before step 2, there must be **no other wires** going to inverters, grounds, solar controllers or ANYTHING ELSE connected to **the negative side of the battery system except for one** cable that connects the two battery negative poles together.

We emphasize this because quite often people **make the mistake of leaving chassis ground, or one or more other device still connected to the negative side of the battery system**—which will result in the wrong battery “amps” being read on the TriMetric.

**STEP 2:** Reconnect all the cables you took off in STEP 1 to either of the two large bolts on the shunt. All such cables must be connected to one side of the shunt—leaving the other bolt empty for step 3. This doesn’t mean that they have to go directly to the bolt itself—but must connect electrically to this side of the shunt. Arrange the shunt so the two small “Kelvin” screws on the side or top of shunt are accessible for connecting later (Step 5).

**STEP 3:** Obtain “shunt to battery cable” referred to in B2 above. See diagram page 7, Figure 1B, “After cable installation”.

Connect one end of cable to the now empty large bolt on the shunt.

Connect the other end of cable to the now bare battery negative battery connection provided in STEP1.

**PREPARE FOR STEPS 4-6: Connecting wires from meter to battery and shunt.** Refer to the wiring diagram on the last page of these instructions to see how the wires connect from the meter to the battery system. Every system will require a minimum of four wires shown as G1, G2, SIG +B1 shown in table below. If you also wish to also monitor the voltage (only) of a secondary battery you will also need to connect a fifth wire from the positive post of this battery to meter as shown in wiring diagram.

The terminal block on the TriMetric circuit board accommodates wire size from 16 to 26 AWG. Use a cable with different colored wires to reduce the probability of wiring errors. **On the chart below write the colors for each wire.** It has suggested colors if your cable uses these colors—Note that G1 and G2 may be the same color, as they both join together at the Kelvin screw on the shunt.

The +B1 terminal must be connected to the + terminal of the *main* battery set. We suggest connecting directly to the + battery terminals so that the meter will operate even if a main breaker is turned off. The +B2 wire is only used if you wish to measure the voltage only of a second battery.

**Ignore this paragraph unless twisted pair wires in a cable are used:** Twisted pair wires are not necessary unless you run the wires very close to other high current carrying wires for 10 feet or more. **However if used**, the wires labeled “G2” and “SIG” should be run with one twisted pair, and if another pair is used, “G1” and “+B1” may be run in an another pair, although twisted pair here will not give any benefit. Clearly establish which wires in the cable are “paired” together. This often requires stripping quite a bit of insulation to see which pairs are twisted together. Then choose one twisted pair for G2 and SIG (the ones for which twisted pair is helpful), and record the wire colors for that pair below in the chart. You may want to use a piece of tape at each end of the cable to tie these two together, to clearly mark the pair. Then you can also choose a pair for G1 and +B1 and record their colors on the chart above, and an extra wire for +B2, if used.

	CONNECTION	WIRE COLOR
supplies - power to meter →	G1	(black?)
amp sense (twisted pair if used) →	G2	(black?)
	SIG	(white?)
supplies + power to meter →	+B1	(red?)
measures 2nd battery voltage (optional) →	+B2	

**STEP 4: Connect wires at battery/shunt end:** Using chart above for wire colors:

- a. First connect both the **G1** and **G2** wires to the Kelvin “load side” terminal (on the shunt *farthest* from the minus battery terminal lead,) as also shown in Figure 2. These two wires must join together *only* right at this terminal.

- b. Then connect the **SIG** wire to the *other* Kelvin “battery side” terminal (*closest* to the minus battery connection.)
- c. Connect the wire for the **+B1** connection to one side of the one amp fuse holder. Don’t yet put in the fuse.
- d. A wire from the other side of the fuse holder must connect to the + terminal of the *main* battery set. We suggest connecting it directly to the + battery terminals so that the meter will operate even if a main breaker is turned off.
- e. Then, if you are measuring a secondary battery use a second fuse to connect the secondary battery + terminal to its **+B2** wire.

**STEP 5: Connecting wires to meter:** Check that the fuse holders installed in STEP 4B still have their fuses removed.

**TM-2030-RV only:** Take the meter out of its box by removing 4 screws. Drill a hole in the plastic box in a desired location and size to allow the cable or wires to enter the box. Thread the wires through the hole.

**TM-2030-A only:** The panel can mount in a suitably sized “double gang” electrical box that is mounted 90 degrees from its usual orientation on the wall. Thread the wires through a suitable hole in the box.

The meter circuit board has a 5 pin terminal block on the rear. The five connections are labeled: G1, G2, SIG and +B1 and +B2. Strip insulation off each wire 1/4 inch or so.

**STEP 6:** Use a small screwdriver to loosen the screws on the connector and insert each wire in a separate connector hole using the chart above and/or wiring diagram (Figure 2) to determine which wire goes to which terminal, and tighten each screw to hold the wires securely, taking care that there is no danger of shorts between the wires.

**Make a final check of the wiring. Install meter in box and finally insert the 1A fuse(s) in the battery fuse holder(s).** Digits should light up on the meter. **If fuse blows, wiring is probably wrong: before replacing fuse:** carefully check that **B1+** wire from battery and fuse goes to proper “B1+” terminal on the meter. (See wiring, Figure 2)

**If you installed the more common 500A/50mV shunt,** proceed to next step 7. If you used the 100A/100mV shunt, see section C2 below: “How to program your meter for the 100A/100mV shunt”

**STEP 7: Here’s how to check that you’ve probably wired you meter and shunt properly:**

1. Push “SELECT” to illuminate the front panel light: B1 VOLTS. The battery volts should display.
2. Push SELECT to show AMPS. Turn all charging sources and all loads off, with the inverter completely off (not even in “standby”). The meter “amps” display should show near 0. (0.0 to 0.1 amps if using the 500A/50mV shunt. If using the 100A/100mV shunt minus 0.03-0.05 amps which is the current used by the TM2030 itself )
3. Turn on a known load of over 20 watts. (One or more lights, for example,.) This should cause the “AMPS” reading to become more negative. The “amp” value should be about equal to the watts divided by 12 for a 12V system plus a little more for the inverter power. ( $20 \div 12 = 1.8$  amps) Divide by 24 for a 24V system.
4. Check AMPS charging from every charging source. As you turn each charging source on (solar, alternator, battery charger, etc) be sure that for each source the amps become more positive by about the amount you would expect from that source.

**STEP 8 FINAL STEP: program two important program values for your system. This is necessary to make the “% full” display work correctly::**

1. Hold the SELECT button down, and when “P1” appears in the display, release the button. If you miss it, just hold it down again until you succeed. The display will show the “Charged voltage setting”, alternating with “P1”
2. Momentarily push BOTH SELECT and RESET at the same time—to get the three green lights on the meter to flash on and off. Now you can change the number.
3. For a 12V system enter 14.3 volts. For a 24V system enter 28.6 volts or 48V system 57.2. Push the RESET button to make the number go up. To make numbers go DOWN you must go all the way to 65.0—then it will jump to 10.0 and go up again.
4. Next Push SELECT a few times to show “P3.” This will display “battery capacity.”

5. As before, momentarily push both SELECT and RESET—three green lights will flash. Enter your “battery capacity” in amp hours. **If you do not know what your “battery capacity” is, see below “How to determine battery system capacity.** As before, the RESET button will increase the numbers. Note that the display can’t show above 999, so above this you will see a flashing decimal point. The flashing decimal point means “multiply the number by 1000.”. To go down in this display, you will need to go all the way up to 9.99, (9990 amp hours) then down to 10.

These numbers cause the Percent Full to reset to “100%” every time the battery is fully charged.

This occurs when the voltage exceeds the P1 value and the charging amps are less than P2 (expressed as a percent) times P3 (amp hours.) Refer to TM-2030 Users manual, Section 6.2 for a comprehensive description of what these do.

\*\*\*\*\*

**C1. How to determine program item P3: “battery system capacity”** This is a number in “amp hours” that indicates how much charge your batteries hold when they are fully charged. For “deep cycle” batteries this number is specified by the battery manufacturer. Find the “capacity” in amp hours from the manufacturer. If several different values of “capacity” are given, you can use the “20 hour discharge” value. If you have only one battery then use that value in P3: It is more usual to have more than one battery connected together as shown in Figure 1: Batteries A and B are connected “**in series**”. String A-B is then connected “**in parallel**” with string C and D.

**When combining batteries here’s how to calculate total amp hours:**

**When you put identical type batteries in series** the amp hour of the series string is the same as the amp hour rating of each single battery in the string. (Add the voltage of each for total volts.)

**When you put them in parallel** then you add the amp hours of each string or battery. (Total volts are SAME as each.)

**When you have batteries that are both in series and in parallel,** first compute the amp hour of EACH series string. Then add those together for as many series string as you have to get the total value. Put this value in the “battery system capacity” (P3) in Table 1 on page 7. **Values over 1000 amp hours will appear with flashing decimal point: e.g. 1.02 (decimal point flashing) means 1020 Amp hours.**

**C2. How to program your meter for the 100A/100mV shunt.** If you are using the 100A/100mV shunt you must program the TM-2030 for this—otherwise the “amps” values will show as ten times higher than they should. Follow these steps:


1. Hold SELECT switch until “P1” comes into display. Then release SELECT. If you miss the P1, hold SELECT again .and it will come back around.
2. Push SELECT about 6 times to show “P7”.
3. Push SELECT and RESET both momentarily together—and release: 3 green lights should flash.
4. Push RESET a few times to change the display to “L3.”
5. Push SELECT several times until display shows “P11” It will probably show “Sh.H”.
6. Push SELECT and RESET both momentarily together—and release: 3 green lights should flash.
7. Push RESET once to change display to “Sh.L”
8. Push SELECT a number of times and you will be back to the normal display. Continue with step 7 above.

**C3. Optional: Now or later you may wish to program P4, P5, P6.** For information about these, see TM-2030 User’s instructions, Table 2, page 6.

**P4:** Allows the main display to show “watts” instead of “amps”

**P5:** Sets up meter to let you know when too many days have elapsed since last full charge for your batteries. Most useful for people that are continually using their batteries. Not as useful for people that only occasionally use batteries such as many RV’ers or weekend cabin users.

**P6:** Set up a timer to remind you to equalize your batteries at some set number of days.

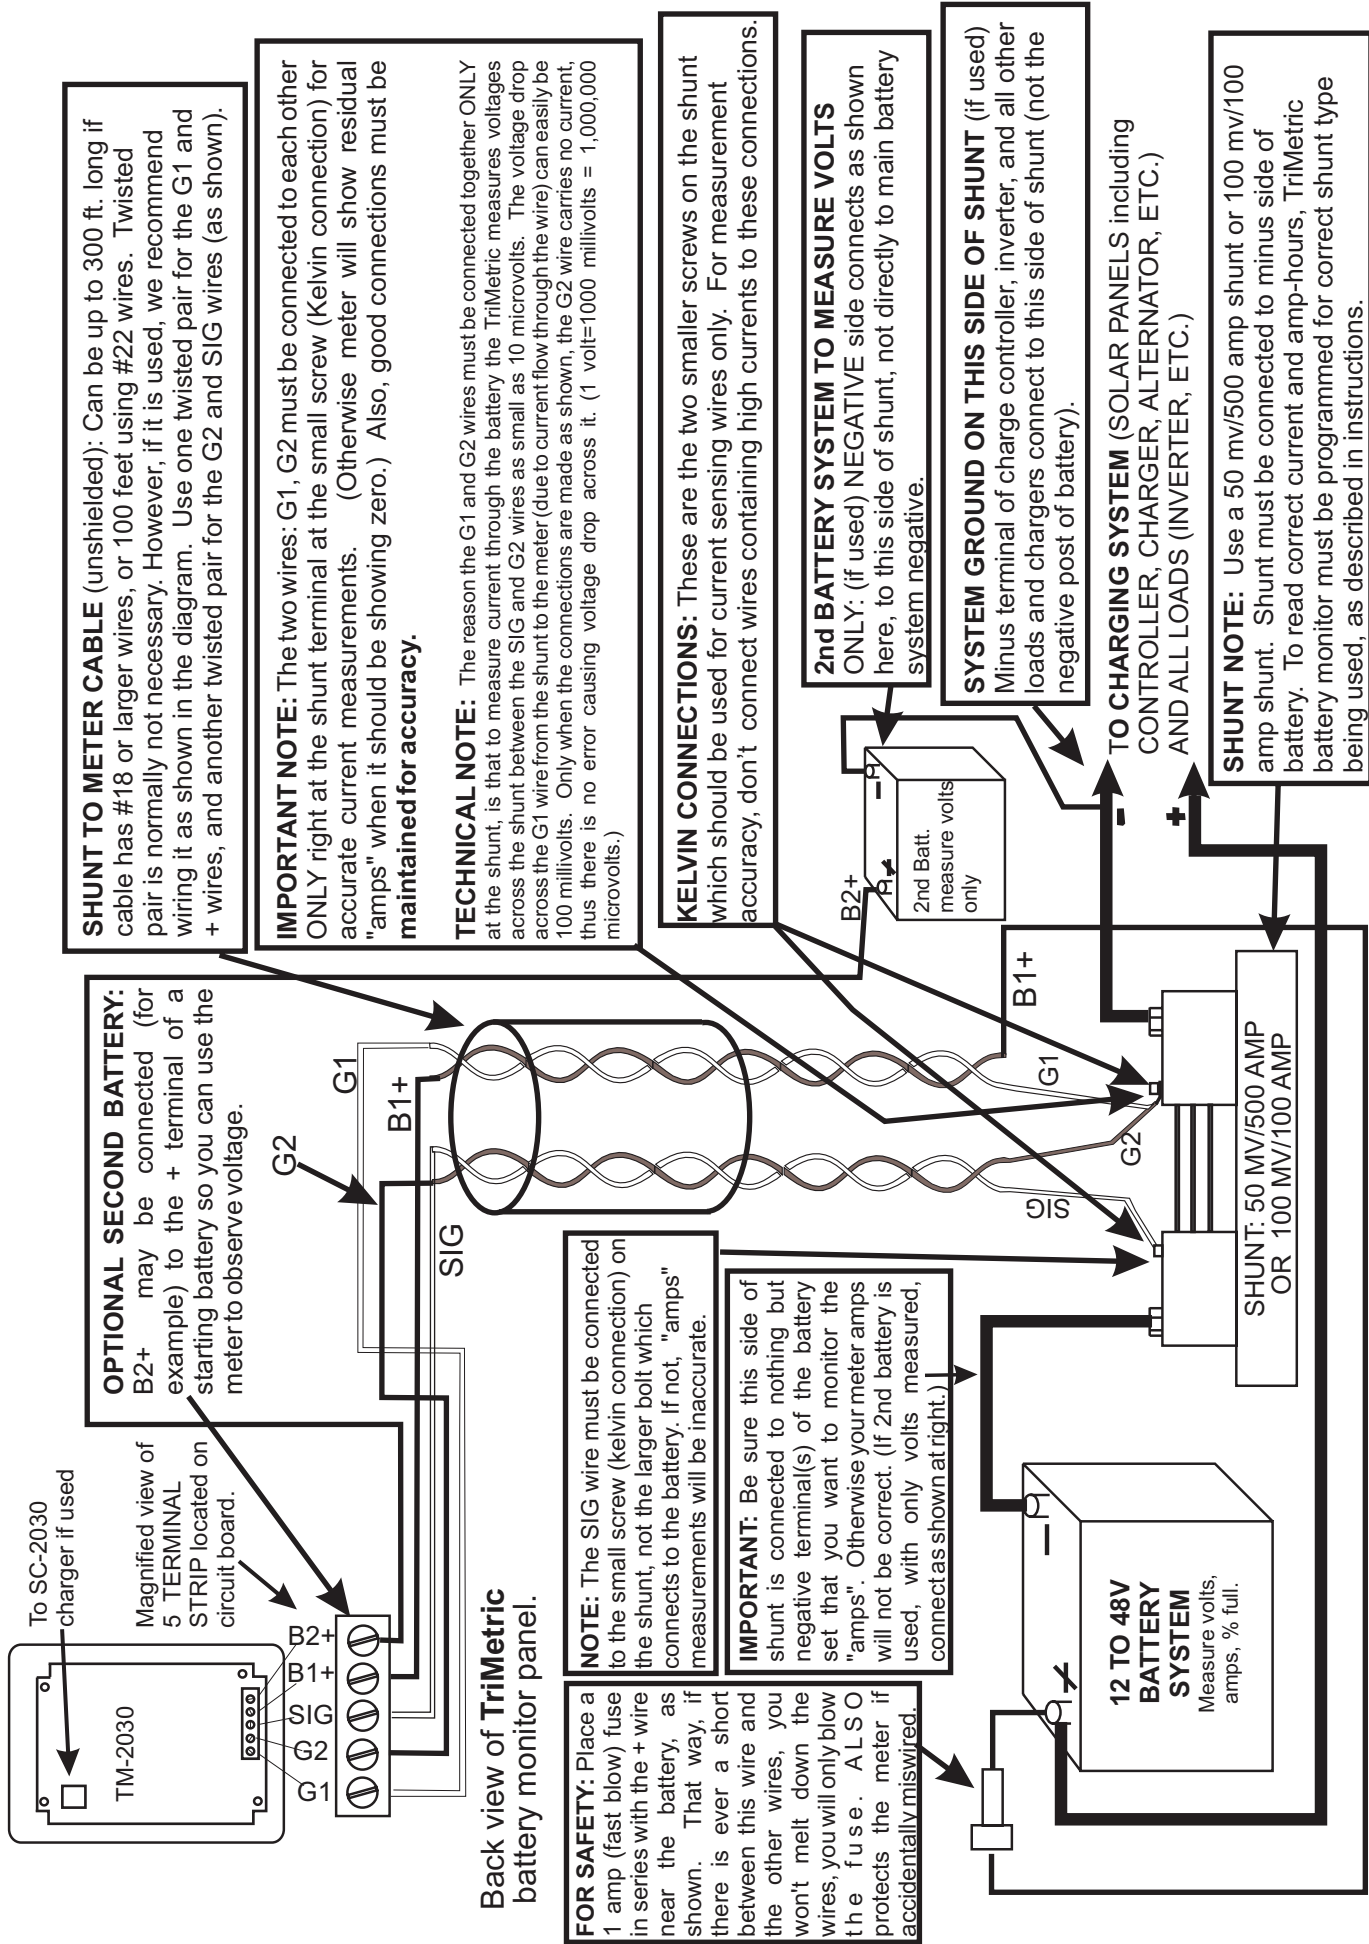

Back view of TriMetric battery monitor panel.

FIGURE 2: TM-2030 TriMetric Battery Monitor Connections

## **USER GUIDE**

1. Overview of TM-2030-RV or TM2030-A battery system monitor
2. Basic instructions for Operating Level L1
  - 2.1 More details on the five less used display items
  - 2.2 What are Battery Reminders?
  - 2.3 Who might want to use operational level L2, L3 or L4?

**IMPORTANT!** Be sure that the installer of this meter has installed the two required parameters (P1 and P3) into this meter suitable for your batteries, otherwise this meter will not give correct data on “Battery % full” and “days since charged”

### **Additional information and reference**

3. Beyond Beginners: Instructions for Operating Levels L2, L3 L4.
4. History Data Available with the TM-2030
5. Summary of Programming instructions
6. Reference section
  - 6.1. Specifications
  - 6.2 How the TriMetric keeps track of Battery % full
  - 6.3. What History data can tell you about your system.
  - 6.4 Further description of each programming function

### **Bonus information on battery care**

7. Important information on how to keep from killing your batteries.

**BOGART ENGINEERING**

[www.bogartengineering.com](http://www.bogartengineering.com)



# 1. Overview of TM-2030-RV and TM-2030-A battery system monitor

The TM 2030 is intended to keep you informed about 12V to 48V battery systems, such as ones found in RV's or off grid homes—which are **regularly** charged and discharged and use “deep cycle” batteries.

The TM2030 may also be used with the new, optional Bogart Engineering SC-2030 30 amp solar charger. These two will together allow both flexible and accurate solar charging and comprehensive monitoring of batteries.

**How the TM-2030 can be useful to you;**

The “amps” or “watts” display measures the rate of energy going in or out of your batteries so you can check your charging systems, and also to see how much energy each of your appliances use to help you conserve energy. The “% Full” display is the most accurate way to keep track of how charged or discharged your batteries are until battery volts gets really low. When battery volts goes below 11.5 volts, (for 12 volt systems) the “volts” display can warn that you are near discharge. The "volts" display also lets you discover if your charger is charging to an optimum voltage, (also see data logging below) which is important for maximizing your battery life. The “days since charged” display shows how recently the main battery (system) was fully charged, so if it hasn't been charged recently you can perform extra charging if necessary to help maintain the capacity of your batteries. The TM-2030 also measure **voltage only** of a second battery set, such as the motor starting battery, or even a solar panel input voltage if desired.

**New to the TM-2030:** an **audible alarm can signal a low battery** (to activate see p.4, sec 2.2.3) And a new display shows **Replaced Percentage (rPC):** shows how much of the most recent discharge has been replaced to your batteries during the next day's charging. Ideally this should reach 110% or even more.

**Data logging for technical people to diagnose system problems:** For each of the last 5 days the **daily maximum battery voltage** level, and **minimum charging amps** is recorded as well as the **percent of overcharge** achieved. Many battery companies say proper overcharge is important for battery maintenance. It also logs for **up to five of the most recent charge/discharge cycles: cycle length, charge efficiency, minimum battery% full** and **minimum voltage level** for each cycle. This is useful diagnostic information which a technician can use to determine that your whole system is working properly.

**Serial data output:** For extreme techies only: The TM-2030 also has a serial 0-5V output with streaming “real time” serial (ASCII) data that could be used to control other electronics. This is described on our website: [www.bogartengineering.com](http://www.bogartengineering.com), under “support”, “application notes”, TriMetric 2025.

**You may select 4 Operating Levels** at which this meter will operate: Level L1, L2, L3 or L4. It is factory set to Level L1, the basic level suitable for most users and recommended for starting. Section 2 of this manual describes the operation for level L1. L2 allows observing Data Logging. Levels L3 and L4 allow additional functions described page 4: *Who might want to use operational level L2, L3 or L4.*

**2. Basic instructions for Operating Level L1:** Refer to figure 1 which covers basic operation. It also has references for further information. **Note that “% full” will display only 3 dashes until system is fully charged for the first time.**

**2.1 More details on the five less used display items** (which you may not need to know):

**AH** This is the measure of Amp hours from a full battery. See section **6.2: How the TriMetric keeps track of battery % full** for a description of how this is measured. This is just another way to look at the "% full" data. For this number to be accurate you must set Program numbers P1, P2, P3 as described in separate instructions: “Installer's Instructions for TriMetric TM-2030.” If you use this meter at Level L3 then also P10 and P14 must be correct. Continued page 4

**CHARGING LIGHT:**

When lighted shows "battery 1 is charging"  
("amps" or "watts" is positive)  
Flashing lamp means battery is charged.

**IMPORTANT DISPLAY NOTE:**

Flashing decimal point means "multiply  
the number seen by 1000"

**BATTERY REMINDERS: (optional)**

Lamp flashes and display occasionally shows these letters  
when:

battery should be recharged "Ch.F"  
or "battery should be equalized" "Ch.E"  
or "battery voltage low" "b.LO"

See section 2.2 for details

**DO YOU PREFER "AMPS" OR "WATTS" to  
show in primary display?**

See Table 2, Program P4, to change

**TO ACCESS PRIMARY (MOST OFTEN USED) DISPLAYS**

Push "**SELECT**" quickly to make display toggle through:

VOLTS (first battery B2, then battery B1)

AMPS (or WATTS) entering(+) or leaving(-) battery B1

%FULL (for battery 1) Battery B1 must be  
charged fully at least once before this will display.

**TO ACCESS SECONDARY (LESS OFTEN USED) DISPLAYS**

Push and hold "**SELECT**" for 3 seconds until "AH" pops into  
display. Immediately release "**SELECT**". You will see:

**AH** = Amp-hours discharged from a full battery.

Push "**SELECT**" quickly to toggle through:

**dSC**= Number of days since the batteries have been fully charged

**dSE**= Number of days since the batteries have been equalized (if used)

**AP** or **Pr** = Shows amps or watts entering/leaving the batteries

Amps : "**AP**" or Watts: "**Pr**" (Which one? see **P4** table 2, page 7.)

**rPC** Shows how much energy you've replaced of the last discharge

See Section 2.1 for more details on these 5 items.

**TO ACCESS PROGRAM OR HISTORY DATA:**

Hold **SELECT** down and watch for "**P1**" (Program) or  
"**H1.1**"(History) at left in display, then release  
**SELECT**. See sections 5 and 6.4 for details on  
**program** data. See sections 4 and 6.3 on **history**  
data.

**NOT SURE WHERE YOU ARE?** Push **SELECT**  
repeatedly until you get back home.


The **RESET** button will reset any of the following:

- "Batt% full" (to 100%)
- Amp Hours from full (to 0 Ahr)
- Days since charged (to 0 days)
- Days since equalized (to 0 days)

To **RESET** any of these:

- (1) Use **SELECT** to view it on display.
- (2) Push and hold **RESET** for 5  
seconds.

Except when viewing rPC: hold down **RESET** to view  
"previous discharge minimum Amp-hours".

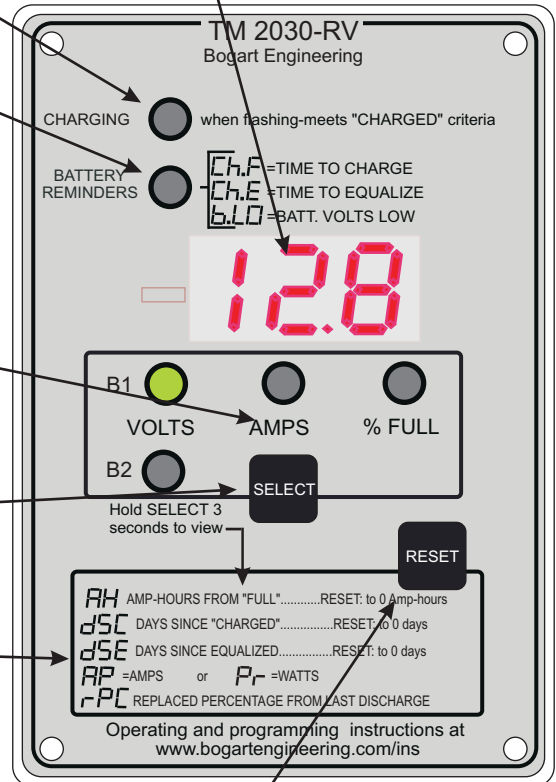

**FIGURE 1**

**TM-2030 Operation Summary**

Shows view of TM-2030-RV, but  
TM-2030-A operation is identical.

**dSC** Shows the **number of days since the battery has been fully charged**. This display gradually increases by 1.00 every day until the battery is charged, at which time this value is automatically reset to 0.00. To understand precisely what the TriMetric considers “charged”, refer to section **6.2: How the TriMetric keeps track of Battery%Full**. For this number to be correct, Program values P1, P2 and P3 must be correct as described in “Installer’s Instructions for TriMetric TM-2030.”

**dSE** Days since the battery was equalized. “Equalization” refers to occasionally overcharging a battery to help it maintain its capacity. It is usually recommended only for liquid electrolyte lead acid batteries, not AGM or Gel types. This display is intended to remind you when to equalize your batteries if this is not done automatically by your charging system. It is essentially just a manual timer, that reads in DAYS, so that you can see how long it has been since your batteries were equalized. Each day when not reset will advance by 1.00 day. Then it must be **MANUALLY RESET** by you when you take action to equalize the batteries. For how to reset this, refer to Figure 1, in reference to the RESET button.

**A or Pr** (**A** shows **Amps**, **Pr** shows **Watts**) This display shows either AMPS or WATTS, depending on what has been programmed in P4 (see table 2 on page 6). If the primary display shows AMPS then this one will show WATTS. And vice versa

**rPC**: “**Replaced Percentage** of recently discharged energy. (Not the same as % full, above.) This shows the percentage of charge that is being replaced--compared to the amount that was recently removed during the *last* discharge cycle. While discharging this display shows 0. When charging it increases--when it shows 100% it has replaced the same amp hours that was last removed. To preserve capacity of liquid lead acid batteries it is often recommended to overcharge to 110-120% before going into “float”. For AGM batteries to 103-108%.

**While showing “rPC”:** hold the **RESET** button down to view how many amp hours were removed during the last discharge cycle. This is the “base” on which rPC is calculated. The reason for showing this is that if batteries were only slightly discharged, then a large percentage showing as rPC could be insignificant. (TM2030 Version 2.2 or higher)

**2.2 What are Battery Reminders?** This is an *optional* feature that is designed to help you keep your batteries maintained, which can remind you to periodically charge your batteries to maximize their life. It comes from the factory turned OFF. More detailed information about the need for proper charging can be found in section 7 of these instructions: **Important information on how to keep from killing your batteries.**

**At basic Operating level L1, there are two reminders which you can invoke if you wish:**

**2.2.1 “Ch.F” (Charge Full)** Reminder to charge batteries fully if they haven’t been charged in several days. You can choose how many days. Lead acid batteries need to be frequently fully charged, otherwise they will lose capacity. We recommend no longer than about 5 days. (See program P5, table 2). If you set it for 5 days then if 5 days pass without fully charging the batteries the message “Ch.F” will occasionally blink in the display, until batteries are again fully charged.

**2.2.2. “Ch.E” (Charge Equalize)** See the end of Section 7 for a discussion of equalization. This display will blink “Ch.E” as a reminder to equalize batteries, (typically monthly) should you choose to use it. Set the display interval in days, or turn this feature off by using program P6, see table 2. After you accomplish equalization you must manually reset the “Days since equalized” number to zero to stop the blinking. First: access the “dSE” display as described in figure 1. Then use the RESET button. After the equalization period elapses it will blink again

**This function is also used to start equalization with SC-2030 charger.** See SC-2030 User’s instructions.)

**2.2.3 To activate audible alarm, see P9 and P13 on page 12 (after reading section 5)**

**2.3 Who might want to use operational level L2, L3 or L4? (See section 3)**

**Level 2** will allow *observing* the History data (always being recorded)—see page 5

**Level 3** will allow these additional functions:

- Allows addition of the optional Bogart Engineering SC-2030 30 Amp solar charger for your batteries.
- Allows setting up the audible and visual “low battery” alarm. (Table 3, P9 and P13)
- Using a 100A/100mV shunt instead of the more usual 500A/50mV shunt (see Table 3, P11)
- Allow disabling the “automatic reset” when the batteries are charged. (see Table 3, P12)
- Choice of “efficiency factor” different from the default 94% (see Table 3, P10 and Section 6.2)
- Calibrate the battery voltage (see Table 3, P18)
- Allows observation of “filtered” values of volts and amps, used for determining when batteries are “charged”. (See section 3 and section 6.2, step5, “Level L3 and L4”)

### 3. Beyond beginners: Instructions for Operating levels L2, L3, L4. To

change: see Table 2, program P7.

**Level L2** has all the functions of L1, but also allows access to some history information (see below) intended to help technicians in analyzing systems to see that they are operating properly. Section 4 has a brief description. Section 6.3 has more details.

**Level L3 and L4** have all functions of L2, and also adds additional programming functions summarized in Table 3 and detailed in section 2.3 and 6.4. Also, Level L3 and L4 allow you to observe the “filtered values” of “Volts B1” or “Amps” (which are extremely sluggish versions of these items) by pushing and holding the **RESET** button while viewing “VoltsB1” or “Amps”. The meaning of the filtered values is described in section 6.2, step 5.

**The difference between L3 and L4** is that the L4 level raises the requirement for a "charged" battery--beyond the usual volts/amps requirement.(see Section 6.2 of these instructions). The additional requirement is that the battery must meet the "float" requirement. defined for the SC-2030 charger described in “[SC-2030 Solar Charge Controller User’s Manual](#)”, section 6.5 Primarily useful with the SC-2030 charger. Not recommended unless you understand the “float” requirement.

### 4. History data available with the TM-2030.

Table 1 below summarizes the 36 items of history data. It is available at Operating Levels L2 , L3 or L4. It is being recorded at level 1, but is only accessible at L2 or higher. These are useful for a technician to determine if your system is working properly, or to diagnose a battery system problem.

**To view the History data:** Go to page 16 (last page of these instructions) which describes how to access this data. A chart is provided there for recording the data.

**To understand what this History data can tell you about your system:** See section 6.3 on page 9.

**The items H2 through H6 refer to data during the last 5 battery “charge/discharge” cycles.\***

**The items H7 through H9 refer to data during the last 5 days.**

Display Identifier	No. of items	Summary History Description (See section 6.3 for more detailed explanation)
<b>H1</b>	<b>1</b>	<b>Cumulative lifetime battery (discharging) amp hours.</b> Analogous to a car odometer, this display shows how much wear has occurred on your batteries due to the repeated cycling of your battery system. Every time you remove energy from your batteries this display records the amp hours you are taking out, but it does NOT record the charging amp hours when you charge. In this way it measures the wear caused by the discharging and charging chemical activity on the battery over its lifetime. <b>RESET to ZERO</b> by pushing and holding <b>RESET for 4 seconds</b> while displaying this data.
<b>H2.1-2.5</b>	<b>5</b>	<b>For last 5 charge/discharge cycles*:</b> Hours since the end of each cycle.
<b>H3.1-3.5</b>	<b>5</b>	<b>For last 5 charge/discharge cycles*:</b> Length of each cycle, hours.
<b>H4.1-4.5</b>	<b>5</b>	<b>For last 5 charge/discharge cycles*:</b> Charge efficiency measurement: Shows how much more amp hours to charge compared to last discharge (in percentage) for entire last discharge/charge cycle.
<b>H5.1-5.5</b>	<b>5</b>	<b>For last 5 charge/discharge cycles*:</b> Lowest % Full value during each cycle.
<b>H6.1-6.5</b>	<b>5</b>	<b>For last 5 charge/discharge cycles*:</b> Lowest battery voltage for each cycle.
<b>H7.1-7.5</b>	<b>5</b>	<b>For last 5 days:</b> Highest battery (B1) voltage attained for each day
<b>H8.1-8.5</b>	<b>5</b>	<b>For last 5 days:</b> If “highest voltage (H7) was less than “charged voltage setpoint” P1 then this shows <b>amps value</b> while voltage was highest. If “highest voltage (H7) exceeded “charged voltage setpoint” P1 then this shows the <b>lowest amps value</b> during time that voltage was above setpoint. <b>Purpose:</b> To show how close it got to voltage/amp charged setpoints.
<b>H9.1-9.5</b>	<b>5</b>	<b>For last 5 days:</b> for each day, shows charge percent that was replaced on that day, compared to the previous lowest discharge.
<b>TABLE 1. See section 6.3 for more discussion of these</b>		

\*A charge/discharge cycle refers to the time beginning from a fully charged battery, followed by partial discharge (to less than 98%), and ending when charging it back up to “charged” again. Data is displayed only when discharge again goes below 98%.

**5. Summary of Programming instructions** Program functions applicable for Operating Level L1 are summarized in Table 2 below. As mentioned above, **it is most important that items P1, P2 and P3 (below in Table 1) be correctly programmed for the Battery%Full data to be correct.** A step by step procedure for doing this is described in the “[Installer’s Instructions for TriMetric 2030](#)”. The additional functions applicable to level L3 are summarized in Table 3 below. If you need more information than given in Tables 2 or 3, look at references in section 6.4 of these instructions.

To observe program data follow steps 1 and 2.

To change program data follow additional steps 3 and 4.

- (1) HOLD DOWN the SELECT button and watch as the display cycles through several different displays. When you see **P1** in the display, immediately release SELECT. If you don’t release quickly enough, just wait longer holding down SELECT until you see the **P1** again, then release. Then the “**Charged**” setpoint voltage (first item shown in table below) will alternate with “**P1**”, so you can observe its value.
- (2) Push SELECT repeatedly to observe **programmable data** P2, P3, etc, as shown in the left two columns below. After going through all of these it will go back to observing normal display data. (Volts, Amps, etc.)
- (3) If during step 2 you see **programmable data** that you wish to CHANGE, push both **SELECT and RESET briefly, but firmly at the same time**. Three green lamps will flash to indicate that you can now change the data. Successive pushes to RESET will increase the numbers slowly. Hold RESET down longer to speed up the change—this will cause data to cycle more quickly through all the possibilities. To make values go down, you will need to keep increasing until it finally jumps to its lowest value again.
- (4) When satisfied with the **programmable data**, push SELECT to get back into OBSERVE mode. Now either continue programming as described in step 2, or to get back to regular displays, push SELECT repeatedly.

PROGRAM MODE NUMBER  *Used by SC-2030 charger	PROGRAMMABLE DATA and ADJUSTMENT RANGE	Factory value	WHAT IT IS FOR (SUMMARY)  For more information, see Section 6.4
		Your value	
*P1	"Charged" setpoint voltage. <b>10.0 to 65.0</b> volts	<b>14.3</b>	The TriMetric determines that battery is charged when actual volts is <i>greater</i> than setpoint voltage, and amps is <i>less</i> than setpoint amps. When this is true the “charging” lamp flashes to indicate a full battery. This resets “amp hours from full” to 0 and “battery % full” to 100%, and the “Days since charged” to 0 <b>Details see section 6.4</b>
*P2	"Charged" setpoint amps multiplier, in % <b>0.1 to 10</b> percent of the value of “battery capacity,” P3. If P2 value is 02.0, and P3=400, setpoint amps=2% of 400 =8 amps.	<b>02.0</b>	
*P3	"Battery capacity" amp-hours <b>10 to 10,000</b> amp hours. <b>Note: flashing decimal point means “multiply number by 1000”</b> ; so 1.02 means 1020 amp hours	<b>220</b>	Enter the battery capacity in amp hours. This setting influences only the “Battery % full” display numbers and uses this information to display this % value correctly for your batteries. <b>Also see section 6.4</b>
P4	WATTS or AMPS choice <b>Pr= WATTS (“Power”), A=Amps</b>	<b>A</b>	Chooses whether AMPS or WATTS shows up on the Primary display, just after “B1 volts”. If you choose AMPS, then WATTS shows on the secondary display. And vice versa.
P5	Days before "time to recharge" reminder <b>1-100</b> days, or <b>OFF</b>	<b>OFF</b>	When "Days since charged" equals or exceeds this number, the "time to recharge"(Ch.F) reminder will flash periodically in display. <b>See section 2.2</b>
P6	Days before "time to equalize" reminder. <b>1-100</b> days, or <b>OFF</b> .	<b>OFF</b>	When "Days since equalized" exceeds this, the "time to equalize" (Ch.E) reminder will display. <b>See section 2.2</b>
P7	Chooses Operational level; Choose <b>L1, L2,L3</b> or <b>L4</b> .	<b>L1</b>	L1 is simplest level. L2=next level: shows historical data L3 Shows all of L1 and L2 plus additional programming options. <b>See section 3</b> for meaning of L4

TABLE 2. Program modes for Operating level “L1” (simplest)

PROGRAM MODE NUMBER	PROGRAMMABLE DATA and ADJUSTMENT RANGE	Factory (and L1,L2) value.	WHAT IT IS FOR (SUMMARY) Where to find more information.
		write your value here	
*P8	Max Allowed Charger Voltage 10.0-65.0V		<b>Used only by SC-2030 charger</b> See SC-2030 instructions
P9	Low Battery Audible Alarm Setpoint <b>Off</b> or <b>1-100</b> percent	<b>OFF</b>	When not OFF, audible alarm will sound and “battery reminder” ( <b>bLO</b> ) will flash when “% full” is less than this value, or if battery “volts” less than P13 setting.
P10	Assumed efficiency factor <b>60</b> to <b>100</b> percent	<b>94</b>	When meter calculates amp hours: <u>Discharging</u> always decreases amp-hrs at 100% rate. When <u>charging</u> increases amp hours at this specified percent rate. <b>Also see section 6.2 step 4.</b>
P11	Shunt type: <b>Sh.H</b> = 500A/50mV shunt <b>Sh.L</b> = 100A/100mV shunt	<b>Sh.H</b>	Shunt type for correct Amps and amp hour values. <b>Also see section 6.4, P11</b>
P12	Automatic reset <b>ON</b> <b>OFF</b>	<b>ON</b>	When “ON”, Batt % full reset to 100, and Amp-hrs reset to 0 when Charge criteria are met: P1, P2. <b>Also see section 6.2 Step 3, and section 6.4, P12.</b>
P13	Battery low volts alarm: <b>10.0-65.0</b> volts	<b>10.0</b>	When volts is at or lower than this value, “b.LO” flashes occasionally in display as “battery reminder.” Also audible alarm occurs when P9 is not “OFF”. <b>Also see section 2.2.3 and section 6.4, P13.</b> .
*P14	For SC-2030 Charger: sets maximum time allowed to be in “absorb” before “float” <b>0.0 – 25.0</b> hours	<b>0.0</b>	For exact description, see charging profile graphs, near page 14 of <b>SC-2030 Solar Charge Controller User’s Manual.</b> . See <b>section 6.2 step 4 and section 6.4, P14.</b>
*P15	For SC-2030 charger: Max. voltage allowed during “finish charge” stage. <b>10.0-65.0</b> volts		<b>Used only by SC-2030 charger.</b> See SC-2030 instructions
*P16	For SC-2030 charger: Float voltage <b>10.0-65.0</b> volts		<b>Used only by SC-2030 charger</b> See SC-2030 instructions
P17	Time before daily maximum measurement will be recorded. <b>0-23</b> hours	(N/A)	For history data: H7, H8 and H9 (only): Adjust this to number of hours after present time that daily measurement should be recorded. (Usually to occur late at night). <b>Also see section 6.4, P17.</b>
P18	Voltage calibrate. Set to correct batt voltage	(N/A)	This allows slight adjustment of battery voltage. Use accurate digital voltmeter and adjust to that value. HOLD RESET to INCREASE. Push RESET repeatedly to DECREASE. <b>Also see section 6.4, P18</b>
P19	Program all factory values		Sets all values shown as “Factory values” in this table. Hold RESET for about 4 seconds to accomplish. <b>Also see section 6.4, P19</b>
*P20	Percent overcharge before float. <b>0-20</b> %		<b>Used only by SC-2030 charger</b> See SC-2030 instructions
*P21	Percent of P3 to which "amps" is limited during "finish charge". <b>0-10</b> %		<b>Used only by SC-2030 charger</b> See SC-2030 instructions
*P22	One button auto entry of eight most important program data. Profiles: <b>1-31</b>		Allows quick entry of all or most program data, especially when used with SC-2030 charge controller

TABLE 3. Additional program modes for Operating Level “L3 and L4”

## 6. Reference section: more technical information:

### 6.1 TM-2030 Specifications

**Main battery (B1): Measures Volts, Amps, Watts, Battery % Full, Amp-hours from full, Days since charged, Timer for days since Equalized. Also data logging (history data) described below.**

**Secondary Battery (B2) sharing common negative with main battery: Measures volts only**

**Battery Volts:** From 10.0 – 65.0 volts for main battery. From 0.0 to 100 volts on secondary battery. Resolution 0.1 volt. Accuracy  $\pm 0.3\%$

**Amps charging or discharging:** With 500A/50mV shunt: 00.0 to  $\pm 999$  Amps, resolution 0.1A. With 100A/100mV shunt 0.00-300 Amps, resolution 0.01 Amp.  $\pm 1\%$   $\pm$  least significant digit.

**Note:** Maximum amps is often limited by the shunt capability: maximum current for a typical 500A/50mV shunt is about  $\pm 400$ A. For a 100A/100mV shunt about  $\pm 70$  Amps. (Depending on shunt design and ambient temperature)

**Watts:**  $\pm 20,000$  Watts. (With 500A shunt: when “Amps” read greater than 10.0, Watts accuracy  $\pm 1.5\%$   $\pm$  least significant digit.) When “Amps” value is lower, watts accuracy depends on “amps” resolution accuracy.

**Amp-hours:** Measurement accuracy: 0.00 to  $\pm 80,000$  Amp-hours to same accuracy as amps.

**Battery % Full:** Measurement accuracy  $\pm 1\%$ . Also measures overcharge. Typical system accuracy, if batteries are charged full at least every 5 days : typical  $\pm 5\%$ . With “efficiency” set to suggested 94% the **Battery % Full** Display will be conservative (i.e. display a little lower than actual).

**Meter Power requirement:** About 30 mA when display is on and about 16mA when display turned off.

**Efficiency factor** adjustable: 60-100%

**Battery capacity** settable 10 to 10,000 Amp-hrs.

**Serial Data:** 5V output stream with all TriMetric real time data ASCII coded.

**Charge criteria** defined by: Filtered voltage above Vset. Filtered amps less than Iset. Time greater than Tset, all three adjustable. (Filtered time constant: 140 seconds). See Section 6.2 for detailed description.

**Power Requirement:** Power from main battery B1: 9-65V, 32mA with display lighted. 16 mA with display off.

**Size: TM-2030-RV:** Box is 4-1/4 high x 3 x 1-3/8 inch depth with 1/2 in. mounting tabs top and bottom. (10.8 x 7.6 x 3.5 cm.)

**TM-2030-A:** 4-1/2 x 4-3/4 panel with circuit board 1-1/8 (max) in. deep. (11.4 x 12.1 x 2.85 cm.)

**History data:** retained in memory when power turned off

• **Cumulative amps discharged during battery lifetime** (0-999,000 amp hours) to measure battery wear for last 5 charge/discharge cycles the following are recorded:

- **Hours ago since end of cycle**
- **Length of cycle** (hours)
- **Amp hour efficiency factor for each complete cycle** (to show charge efficiency of battery system)
- **Minimum voltage** for each cycle.
- **Minimum battery %Full** for each cycle

For the last 5 days:

- **Maximum voltage each day**
- **Amps value:** intended to show how close to “charged” the battery system got
  - When maximum voltage greater than charged setpoint volts: shows minimum amps.
  - When maximum voltage less than charged setpoint volts: shows amps at maximum voltage
- **Maximum value percent charge returned compared to most recent discharge**

### 6.2 How the TriMetric keeps track of battery % full. The TriMetric uses “Capacity (P3)”, “charged setpoint volts (P1)”, “charged setpoint amps percentage” (P2) and “efficiency factor” (P10).

Initially when the TriMetric is first turned on it does not have any way of knowing how full the battery is. The “battery % full” display will start out blank : “---” Here are the steps it uses to determine the % full

1. First the battery must be initially charged fully. When the TriMetric is charging, there are **two choices you can select for what defines “full charge”**:

**A: More common choice, if program P7 is in level L1, L2, L3:** Two conditions must be met simultaneously:  
(1) while charging, the battery voltage must exceed the “Charged setpoint voltage” (which you set by Program P1.) and (2) the charge current (amps) must decline to below the “Charged setpoint amps” (which percentage you set by Program P2). Note that *filtered* versions of “Battery voltage” and “battery amps” are used, described in step 5, below.

**B: Less common choice if program P7 is in level L4:** This is typically a higher level standard for “charged” than when in Levels 1-3. It allows additional requirements for charging time, and degree of overcharge percentage required. It is possible to use this to define “charged” with or without the SC-2030 connected. The

batteries must reach the “float” condition as described in the “SC-2030 Solar Charge Controller User’s Manual” section 6.5.

2. When the above occurs, the TriMetric then declares the battery “charged” by flashing the “charging” light and resets the “Days since charged” to 0.
3. When the charging is completed, and the batteries start to discharge again the “Amp hours from full” display is reset to 0.00, and Battery%Full is reset to 100%. This assumes that the “auto reset” is on—(Program P12), which is always the case in Level L1 or L2. It may be turned off if desired in Level L3
4. As the battery discharges, the TriMetric “amp hours from full” gradually go negative at a rate depending on the number of amps, and go positive when charging. For example if the batteries are discharging with “amps” = minus 10.0, the “amp-hours from full” display gradually *decreases* by exactly 10.0 for every hour that goes by. Similarly, when amps are *positive* 10 amps (charging) the “amp-hours from full” display gradually increases by *almost* 10 amps for every hour. The “almost” has to do with “charge efficiency factor” which can be adjusted by program P10. If the efficiency factor is set to 100%, the amp-hours will go up by *exactly* 10 per hour, however if the efficiency factor is 94%, the “amp-hours from full” display goes up by only 94% of 10, or 9.4 amp-hours for every hour. The purpose of this is to account for the fact that you don’t get as many amp-hours out of the battery as you put in, so that the TriMetric “amp-hours from full” display will give a reading of amp-hours which reasonably closely estimates how many amp hours have been removed.
5. It was mentioned in step 1 above that *filtered* values of “volts” and “amps” are used to judge when the batteries are charged. This means that before using these values they are filtered so as to be only very slowly responsive versions of “volts” and “amps” are used, so that quick variations of voltage or current don’t give a false “charged” signal. (They are filtered with a time constant of about 2.4 minutes.) These “filtered” versions can be viewed, if desired, by putting the TriMetric in Operating Level L3 or L4—when viewing the “volts” or “amps” display you will see the “filtered” version by holding down on the “RESET” button.

The “battery % full” reading of the TriMetric just puts the “amp hours from full” number in a different form, which depends on the “amp hours “Capacity” number that has been programmed in to the TriMetric in program number P3. When the battery is full and the “amp hours from full” value is 0 then the Battery% full will be 100. When the battery is depleted so that the “amp hours from full” goes to a negative value equal to the “capacity” programmed in P3 then the Battery% full goes to zero.

## 6.3 What History data can tell you about your system See the chart on the last page to see how to access and record this data.

As explained in detail at the top of page 16:

There are 9 types of data recorded as “History” data. These are labeled H1 through H9.

1. Use program P7 to put meter in complexity level 2, 3 or 4.
1. Get to history data by holding “SELECT” down until you see H1.1 come into display.
2. Push SELECT button to advance to each of 9 types of data
3. For each data item, (except for item 1.1) push RESET to go back in time, up to 5 days, or 5 cycles.

**H1.1: “Battery Odometer”:** Cumulative Lifetime Battery (discharging) Amp hours: Analogous to an odometer in a car: Displays how many amp-hours you got from the battery system over its lifetime. This number starts at 0 when manually reset which would usually be at the time of initial installation of the batteries. To manually reset to 0: when this value shows in display hold the RESET button down for 5 seconds or so. Whenever the value of amps is negative (charge is leaving the battery) the display counts “amp-hours” down. It does not record when battery is charging (amps is positive). It is analogous to a car odometer—rather than miles travelled it shows how much total energy the batteries have delivered.

Evaluate performance of the batteries and the level of care which they received. In case of power interruption to the meter you will only lose a maximum of 3 hours of this data--because this data is automatically stored to non volatile memory every 3 hours. This number can be displayed to -999,000 amp hours, which is longer than most battery sets would be expected to last. If it approaches this, you should record the value and manually reset it--since it does not just roll over to zero by itself after 999,999.)

Often battery life of “deep cycle” batteries is rated by the number of discharge cycles they will undergo without failure--however this usually assumes a fairly complete discharge during each cycle, followed by complete recharge. The life of deep cycle batteries is increased if the discharge depth is less--in fact the number of cycles of life is inversely related to the depth of discharge of each cycle--so if you discharge only half the amount during each “cycle” the battery typically will last about twice as many cycles.

When buying batteries you have a choice whether to double the number of batteries in your battery set—which will reduce the average cycle depth of discharge to one-half, which should approximately double their number of cycles. If the number of cycles did actually double there would be no cost benefit since twice the battery size



would cost twice as much to replace. (Of course you'd get more days of autonomy.) But in a vehicle it would add extra weight. This measurement is a way of getting quantitative data on these kinds of questions.

**H2-H6: Battery Charge Cycle Data** provide answers to these system questions for the last five charge/discharge cycles: A discharge/charge cycle begins at the time the battery is “fully charged” and ends at the next “full charge”—a precise definition is given in section 6.2: How the TriMetric keeps track of battery % full.

**H2 and H3: Did too many days go between full charges?**

**H4: System efficiency: Is a reasonable percent of the total charging energy being recovered during each discharge(80-97%)—not too much or too little?**

**H5: How deeply are the batteries being discharged?**

**H6: How low does the battery voltage go?**

**More detail about what H2-H6 can tell you:**

**H2.1 through H2.5: (somewhat redundant information to H3) How many hours ago that the cycle in question ended (H2.1 most recent cycle. H2.5 oldest cycle data).**

**H3.1 through H3.5: Length of the cycle** in question, in hours. This shows how much time goes by between full battery charges. Frequent charging helps keep them from permanently losing capacity. If solar charging is used, and the days are sunny, they should charge nearly every day. **If times are too long, say over 4 or 5 days (96-120 hours)** in a system that is being significantly discharged every day batteries may not be charged sufficiently to maintain their capacity—although this could be OK if they are hardly used and mainly on float. **Long times could also mean either that the charger “absorb voltage” or “absorb time” is set wrong, or that the “charged” setpoints in the TM-2030 programs P1 and P2 may be set incorrectly so that the charging system cannot reasonably reach them.** Then refer to data in H7-H9 (below) to show why.

**H4.1 through H4.5: Total charge efficiency over each cycle** (records total discharge divided by total charge) which shows how efficiently the batteries are storing energy for that cycle—which from a theoretical system efficiency standpoint would be ideal if 100%--but for a real system will be less. **If this number is consistently over 100%** that means that the wiring to the shunt is incorrect, (batteries cannot be more than 100% efficient!)—possibly a *charging source* (possibly solar controller, or chassis ground?) connected to the negative post of the battery instead of on the load side of the shunt, so the meter is not measuring it. **If unreasonably low, say below 70%**, that may also indicate a miswiring—in this case a *load* that is connected to the negative post of the battery. Or perhaps the batteries are old and inefficient. Or the charger could be overcharging the batteries (which could also be damaging batteries—but this may not be significant if batteries have been recently very lightly used—see “rPC” in section 2.1 page 4). **For liquid electrolyte batteries an average number between 80 and 90 is reasonable.** If a higher average, the batteries are getting less than 10% overcharge, which is usually less than optimal for liquid electrolyte batteries. **For AGM batteries ideal could be 92-96% as they do not need as much overcharge.** Another cause of an *occasional high percentage* is that the temperature has gone down significantly between one full charge and the next. This can cause the “charge setpoints” to be achieved with a lower state of charge than before—so less energy was able to be charged. Similarly, an *occasional low percentage* could result if the temperature has risen at the batteries, because when warmer they can accept more charge than before when cooler, which will reduce the apparent efficiency value.

There should be some consistency in the readings. Although the values should ordinarily be less than 100%, as said they can occasionally be greater than 100% when the temperature of your batteries drops as explained above. **If readings are wildly inconsistent** it could be a wiring error, with a source or load that is connected to the negative side of the battery, (a frequent installer mistake!) instead of on the load side of the shunt. (See Figure 1 of TM2030 Installation instruction.)

**H5.1-through H5.5: Minimum Battery % full** during each cycle. This is another check to see how much usage the batteries are getting, that they are not being run too low between charges.

**H6.1 through H6.5: Minimum voltage** during each cycle. This can show if the battery voltage is too low before being recharged. Going below 11.5V or so (12V system) would indicate batteries are nearing their low limit.

**H7, H8, H9 check if proper charging is taking place.** Charging data for each of the last 5 days: **H7:Maximum charging volts. H8:Minimum charging Amps. H9:Maximum overcharge percentage**

- Each recorded data represents a 24 hour period that ends at a time of day (or night) that you can determine by referring to Program 17, on page 13

**Purpose of H7, H8 data:** The way that the TriMetric determines that the batteries are “charged” (in Level 1, 2 and 3 operation) is to sense that the battery volts exceeded the programmed P1 value, and the charging Amps are less than the value of P2 times P3 (P2 is expressed as a percentage). The H7 and H8 history data track these values so you can see, during each 24 hour period, how high the volts actually got, and how low the Amps got—so if these values were not achieved you can understand why.

The **H7** data shows the **maximum voltage** the batteries were charged on that day. The **H8** data shows the **minimum amps** that were attained when the voltage was near that maximum (**Filtered values of volts and amps are recorded**, as defined in section 6.2.5.) The meter (in Level 1, 2 or 3) will only indicate “charged” on days when the **H7 maximum volts** data is **equal or greater** than the **P1 program data**—and the **H8 “minimum amps”** data is **less than the product of P2(percent) times P3**, so the H7, H8 data allow you to discover how close these values got, on each of the last 5 days.

**Purpose of H9 data:** When the meter is in “Level 4” operation, in addition to the above, to sense “charged” it also requires that the returned percentage of charge exceeds the P20 value. That is what the H9 History data tracks.

**Also use the H7 maximum daily voltage data to:**

verify that the charge controller or chargers are charging to correct absorb voltage.

verify that sufficient charging is taken place during that day to reach the “absorb” voltage.

**Also use the H8 maximum daily voltage data to:**

verify that enough charging time occurred to reduce the amps to a satisfactory low value.

**Also use H9 to see how much daily overcharge in percent was achieved**

verify that sufficient overcharge took place that day (compared with the most recent low charge point) has been during the day. According to many battery experts, properly charged liquid electrolyte lead acid batteries should be charged with 110-120% more than the (low) level to which were just previously discharged to ensure they will not gradually lose capacity. AGM batteries should be charged to 104-109% of previous discharge.

- **Technical note: The value recorded for the H8 minimum current data** depends on whether the voltage on that day exceeded the “charged voltage” setpoint programmed in program P1.

If the H7 (maximum filtered voltage) on a particular day is **less** than the “charged voltage” setpoint :

Then the amps value (for that day) is the (filtered) amps value at the moment that the maximum voltage occurred.

If the H7 (maximum filtered voltage) on a particular day is **greater** than the “charged voltage: setpoint:

Then the amps value is the minimum (filtered) amps during the time that the volts exceeded the setpoint

## 6.4 Further description of each programming function. Instructions for observing and changing programming items is in section 5

**P1 and P2: "Charged" setpoint voltage and "charged" setpoint amps.**

**Purpose of data:** The "charged" voltage (P1) and amp (P2) setpoints provide information the TriMetric uses to determine when your battery set is "charged". Details are given in section 6.2. **The amp setpoint (P2) is now entered as a percentage of P3, unlike with the TM2020 or TM2025, when the amps were entered directly.** So the actual amps value, below which the batteries need to be charged, is the *percentage* in P2 times the capacity P3.

**About voltage and current "charged" setpoints:** Of these two setpoints, the “voltage” setpoint is the most critical, and the “current” setpoint less so. If you have only low current charging sources you could set the current setpoint to “OFF”—however both should be used if at least one of your chargers is a high current charging source such as a generator charger or inverter/charger. More specifics follow.

**Choosing “charged setpoint volts”:** Section C1 of the “**Installers instructions for TriMetric TM2030**” has simpler instructions on determining these parameters. Similar information is given in section 7 of these instructions.

**Some technical details:** For a 12 V lead acid battery system, the **voltage setpoint** will usually be between 14.0 and 14.8 volts. Double these numbers for 24V systems or multiply by 4 for 48V systems. As pointed out in Section 7, your *chargers* and *charge controllers* must be set according to information from the battery manufacturer. Once those are set, the TriMetric voltage setpoint should be 1% or so lower than the charger settings. If this is done the TriMetric "charging" lamp will begin to flash (as indicated on the top “charging” lamp on the panel) some time before the charging system decides that the batteries are charged and stops charging your batteries. If you have two or more chargers, such as solar and generator, both chargers would normally be set to charge to the same voltage, and the TriMetric should be set with the voltage low enough for either one to reach when the batteries approach full charge.

**Choosing the “charged setpoint percentage amps”:** **IMPORTANT: New for the TM-2030: enter this percentage directly into program P2 from 1.0 to 10.0%.** The method of setting this has been changed from the older TM-2020 or TM-2025. If you have a generator or other charger that has high charging current capability it becomes important to also set the “charged setpoint amps” in the TriMetric. This is because a high current charging source can force the battery voltage to rise and meet the “charged voltage” setpoint even though the batteries are not yet well charged. With such a charger, once the voltage reaches its maximum “bulk voltage” the charging current (amps) will start out high, then *gradually reduce* as the batteries become more charged. Proper adjustment of the “current setpoint” will ensure that the TriMetric will not consider the batteries “charged” until the charging current goes below the setpoint amps. The lower you set this value, the more “charged” the battery must be before the TriMetric will declare the battery to be “charged”. To set this value

you must know the amp-hour capacity of your battery system which has been set in program P3. We often suggest value for the “current setpoint” setting that is 2% of C, which is the default setting when the meter is new, where C=battery system capacity in amp-hours that is programmed in P3. For example if you put =700 amp hours into P3, then a P2 amps setting of 2% would be 2% of 700 = 14 amps. Better charging would result using 1% of C or even 0.5%, for the battery to be really charged—however this may require more solar time (for example) than is usually available. If you are in complexity levels L1, L2 or L3, when you enter the current setpoint the TriMetric will require that *simultaneously* both the filtered voltage setpoint be *equal or exceeded*, and the filtered current (amps) value be *less* than or equal to the current setpoint before the TriMetric will indicate that the batteries are “charged”. **In level L4, further requirements need be met, as described in the SC-2030 Solar Charger manual.** The “filtered” values are very sluggish versions of these parameters—explained in Section 6.2 step 5. Also, if you are set to complexity level 3 or 4 (using Program P7) you can observe these filtered values of amps and volts. To do so, when observing either amps or volts, when you hold the reset key down the filtered value will show in the display.

**Usually in float mode?** Another possibility we should address is if your charging system stays much of the time in “float” mode, which may be true for a “line tied” system, or a battery system in an RV that is only occasionally used, with its battery usually connected to a charger that maintains it at “float” voltage. With a lead-acid liquid electrolyte battery the “float” voltage may be 13.4 volts (for 12V system) For a system that is usually in “float” mode, the TriMetric voltage setting can be just below 13.4, (or whatever the float voltage is) and the “amps” setting can be for some low value, such as C÷90 or so, or to a value which the “amps” would only go below during the “float” condition. Then the TriMetric will reset only after the “float” condition is attained.

**P3: Battery assumed capacity.** This is the basis for calculating the Battery % full number. The Battery % Full is calculated as = (Capacity – AmpHoursFromFull) ÷ (Capacity), expressed as a percentage. The Capacity (in amp hours) is what you program in here. The AmpHoursFromFull is the value shown on the secondary display group. Also see the “Installer’s instructions for TriMetric TM-2030” section C, under program item P3.

**P4: Watt/Amps choice.** Select which you prefer as your primary choice. Explained on Table 2.

**P5: Days before “time to recharge” Battery reminder.** Explained in section 2.2.1 and Table 2.

**P6: Days before “time to equalize” Battery reminder.** Explained in section 2.2.2 and Table 2.

**P7: Operating Levels** This allows switching to any of four Operating levels: L1=simplest, and OK for most users. L2= All of L1 plus allows viewing History Data information. L3 and L4: All of L2 plus many additional programming options shown below. L4 also redefines “charged” criteria. See section 3.

**The following program items are available when the TM-2030 is switched to L3 or L4 level. Use program P7 to select L3 or L4**

**Program modes P8, P14, P15, P16, P20, P21 and P22 are only used only with the optional SC-2030 charge controller.** See **SC-2030 Solar Charger User’s Manual:** Section 6.4 and profile graphs for exact descriptions.

**P9 and P13: Audible Alarm. How to turn on or off. First be sure to program P7 (above) to “L3” (or “L4”).** Activate audible alarm by programming P9 so it is NOT ‘OFF’ but has a number. Adjust the number for “Percent full” below which you want the alarm to sound. We suggest 50 to start. Then go to program P13 and program a battery voltage below which it will sound. (Suggest 11.4 for a 12V system—22.8 for 24V.) Then the alarm will sound if the volts go below 11.5 or the % Full goes below 50%. When the alarm comes on it may be silenced by the **reset or select** button—but the alarm’s presence will still be indicated by the flashing “BLo” in the display window.

**P10 Assumed charge efficiency factor:**

**Purpose of data: "charge efficiency factor"** See section 6.2 step 4 for an explanation of “charge efficiency factor”.

**Choosing values of "charge efficiency factor":** In the “L1” mode this value is fixed at 94%. If you wish to adjust it to a different value you will need to switch to “L3” mode. The actual “charge efficiency” factor for lead acid batteries *while they are not at the top of charge* is generally higher than 94%, so this will usually give a *conservative* value for “amp-hours from full”-- that is the meter will generally slightly under-estimate the “% Full” value for the batteries which will give a useful practical result for knowing state of charge.

**Optional technical note:** Some people familiar with batteries will be surprised that the suggested “efficiency factor” is as high as 94%. Without going into all the details here, there are two reasons for this: (1) The number entered in the TriMetric is not true battery efficiency, or *energy* efficiency, (which is often quoted at 70-80% for lead acid batteries) but *charge* efficiency. Charge efficiency (the ratio of total amp-hours you get out divided by total amp-hours to charge the battery) is always greater than energy efficiency. (2) What is entered in the TriMetric is not even the overall charge efficiency of the battery, but the charge efficiency while the battery is *not* at the top of charge, and not gassing. A battery is not charge efficient while at the top of charge, so if this part is excluded the battery is very charge efficient. (We have measured this to be 95-98% with Trojan wet cell batteries.) Also note—when batteries are given a good, adequate charge they will not show up with very high efficiency.

**P11: Shunt type:** This must be set according to the shunt type you have. This determines the sensitivity of the “amp” input to the TriMetric, so that it reads correctly for the shunt you have. If your “amps” readings appear to be off by a factor of 10, the most likely cause is this that is not set correctly for your shunt.

**Choosing value of "shunt type".** At L1 level this is fixed at the more common 500A/50mV shunt. The 500A/50 mV shunt is specified by “**Sh H**” (“High current shunt”) If you have a “100A/100 mV” shunt, you should enter **Sh L** (“Low current shunt”). Only the *ratio* shown is important to the TriMetric, so that from the TriMetric’s point of view a 200A/200 mV or 300A/300 mV shunt is equivalent to a 100A/100mV shunt.

**P12: Automatic reset on/off for amp hours** described in section 6.2, step 3. It must be **on** to measure battery percent full, but it may be turned off if the meter is used in a different application. When off, “amp hours” will never be reset to zero except by using the manual reset button. The “Percent full” will then not work to provide battery percent full information.

**P13: “Battery Low” setpoint:** This allows you to set the level at which the “low voltage battery reminders” will flash. It also sets the audible low battery alarm as described in section P9 above. Set the value in volts that need to be attained for the “**B.Lo**” reminder to light, or audible alarm to sound. Also see **P9 and P13** on previous page.

**P17: Time of Recording for Daily history data:** This shows the number of hours that will elapse before the daily H7, H8 and H9 logged data will be recorded. So if the actual time is 10PM, and you want the day’s data to be recorded at 1AM, enter “3” hours here.

**P18: Voltage calibration:** This is the “voltage calibration” adjustment if the voltage shown is not exactly correct. This calibration is stable, and should not ever be necessary to adjust—but if you find you need or want to—follow these steps.

1. Get a multimeter that you know to be accurate. Carefully remove the TriMetric panel from its box to gain access to the back of the unit. With the multimeter measure “volts” between the “G1” and “+” terminals that are on the back of the TriMetric circuit board. While doing this you must be connected to a voltage source that is stable. (At the factory for best accuracy we use a voltage exactly between two 1/10 volt readings—we use 29.95 volts and follow the procedure below until we get to “29.9” on the meter.)
2. Switch to the P18 Program, and put it in the “program” mode (3 lights flashing). Observe “correct” value on the multimeter--then push and hold “RESET” down until voltage on the TriMetric display jumps **higher** than the multimeter reading. Release “RESET”. Then successively push “RESET” with many short pushes to gradually bring the voltage down until it agrees with your multimeter. At 12.05 volts it takes **about eleven** pushes to bring it down by just 1/10 volt. It will go down faster with a higher battery voltage. When correct, push SELECT to finish.

**P19: Program factory values.** This reinstalls all the default (factory) values in all the program locations at once—so will erase any data you have put in. Hold down the “RESET” button for several seconds until this occurs.

## 7. Important information about battery charging to keep from killing your batteries

**Even if you abuse your batteries they will probably work just fine—for awhile. By knowing how to care for them you can extend their life to maximize their return to you.**

1. **Charging to correct voltage. Charging for sufficient time. Charging at frequent intervals.**
2. **Not often letting them become totally discharged, or left very long in a discharged condition.**
3. **For liquid electrolyte batteries, maintaining the water level always above the internal plates.**

The most important thing to maintain your batteries is to charge them to correct voltage and current and “often”. We will try to define both. The most common “battery crime” for which the penalty is having to replace your batteries too soon, is charging with insufficient voltage, or not charging long enough to get them fully charged.

**Charging voltage:** One of the most important numbers to know about your batteries if you wish to maximize their life is the “Recommended **absorption charging voltage**” for the batteries. (This is usually given for a battery temperature of 25 degrees C or 77 degrees F.) The typical well designed charger or charge controller used with “deep cycle” batteries (which are the type of batteries designed to be periodically discharged and charged) starts by charging fairly fast (at a high rate of amps), but the battery voltage may start out low if the battery is not well charged. Charging causes the battery voltage to gradually rise over a period of possibly hours—but as soon as it rises to the “absorption charging voltage” the charger is supposed to be smart enough to stop allowing the voltage to rise higher than this to avoid damage to the batteries—although the charger will continue to send current to the batteries at this voltage while the current (amps) slowly declines. **The manufacturer of the batteries should specify what this voltage should be. Get information on charging parameters from the manufacturer, or ask the dealer who sold them to you who hopefully should know. Unfortunately many do NOT know.** This voltage will be slightly different for different types of batteries: For example, 12 volt liquid electrolyte lead acid batteries will have an absorption charging voltage of about 14.4 -15.0 volts. AGM or Gel batteries will have a lower voltage, perhaps at 13.9-14.4 volts. (Multiply these by 2 or 4 for 24 or 48V systems.) Your charger(s) must then be set to the **battery** manufacturer’s (not the charger manufacturer) recommended voltage. If the voltage is too low or too high, battery life will be impaired. It is especially important to get this correct for the AGM or Gel types—not least because they are even more expensive than liquid electrolyte types. Ideally you can adjust this voltage on every charger (or charge controller) you have. Unfortunately some chargers do not leave much choice--and some do not charge to a high enough voltage, and then you will have to settle for whatever the charger determines, at possible detriment to your batteries. If you

have multiple charging sources, for example if you have a stand alone generator, a charger or converter, and also solar, or perhaps also your engine alternator, **ideally all chargers should be set identically** according to what the **battery** manufacturer recommends. Often that's not possible (say, for engine alternator) then the voltage value for that charger should be lower—however then you should have another charger to back that one up to periodically charge to the proper absorption voltage if you want to maximize battery life. Although some chargers just have a switch that says “AGM” or “Liquid electrolyte” to set this voltage, it is useful for you to know this actual voltage number since you now own a TriMetric, to check that the charger is really charging correctly. If all chargers are not set correctly you may be buying replacement batteries before you expected.

**Battery temperature:** If the battery temperature varies considerably the charging source should adjust its voltage to temperature. A well designed charger will have a temperature sensor, and adjust its voltage a little higher at cold, and lower at warmer temperatures. As mentioned above, the absorption charging voltage is usually given for a battery at 25° C. (77° F.)

You can use the TriMetric to determine what your charger is adjusted to by watching “Volts” as the charger is charging the batteries—and eventually you should find that the voltage does not rise any more as the batteries approach full charge. An easier way which doesn't require that you constantly monitor the meter is to use the “History data” (see Section 4, item H7. and H8.)

**Charging for sufficient time:** Not only must the voltage be high enough, but it is the nature of battery chemistry requires the passage of some time at the “absorption voltage” to fully charge. So this means not only adjusting the voltage correctly as mentioned above, but charging for enough time to get the battery well charged. There are three ways commonly used to measure this. (1) charge at absorption voltage for a set time, sufficiently long: from 1-8 hours. (2) Better is to retain the absorption voltage for a long enough time for the charging current (in amps) to drop to a low enough value (sometimes called the “return” value). This is what the TriMetric measures when it makes a judgment about whether the battery is charged. A practical value for this value of amps is to take the total “amp hours” capacity of the battery system and divide by 50 to 200 to get an “amps” value to which the batteries should reduce before charging is completed. We often suggest capacity ÷50, (2% of capacity) not because it is absolutely ideal, but it is a compromise for getting them charged in a reasonable amount of time. (3) Often considered the best way is to return a specified additional percentage of amp hours—for liquid electrolyte batteries returning 110% to 115% of the charge that was just previously discharged is often recommended—for AGM batteries the number is 104%-108%. Very few chargers use this method, but our SC-2030 solar charger has this capability (when paired with the TM-2030 monitor.) (4) The “classic”, but rather inconvenient method which works only for “liquid electrolyte” batteries is to use a hydrometer to measure the specific gravity of the battery acid of each cell to see that it comes up to a high enough value as specified by battery manufacturer. But if you have liquid electrolyte batteries this is worth occasionally checking—to be done just after your batteries have been pretty well charged.

**Why solar panels can be good for batteries:** Even if you don't get all your energy needs from solar, these are often a very useful complement to your engine chargers to reduce the amount of engine time required to charge and yet get a good charge on your batteries. Use your engine charger(s) to begin charging when your batteries are low, which is when they absorb energy at a higher rate, making more efficient use of your engine. Then once they approach full charge turn off the engine and let the panels deliver a slower, but much longer charge to get your batteries well charged without having to run a generator for a long time.

**Charging to full sufficiently often:** It doesn't hurt to discharge a “deep discharge” battery to 50% or less—that's what they are designed to do—but lead acid batteries should not be left uncharged for a long period. The reason is that if the lead sulfate reaction product that is produced as the battery is discharged is left too long it changes its form so as to be harder to convert back to its “charged” state—lead, lead dioxide and sulfuric acid--so you will not be able to retrieve as much energy from the batteries. We suggest charging to “full” at least every five days or so. To help, the TriMetric has a “battery reminder” function to remind you to charge the batteries fully after a certain number of days have elapsed in which they have not been brought to full charge(which you set using Program P5). Once you fully charge them the flashing reminder will cease. See Section 2.2.1. Also, the “days since charged” display on the “secondary displays” page 3 will tell you how long it has been since they have been fully charged.

**"Equalization" refers to a process of occasionally overcharging your batteries--**which is usually recommended by manufacturers of "wet cell" lead acid batteries--but, however is *usually not recommended for "AGM" OR GEL sealed lead acid batteries, and overdoing it can damage these types.* More recently some companies making AGM batteries occasionally recommend this. (Example: Concorde Battery Co.) The Trojan battery company recommends that their wet-cell batteries be equalized every 1-2 months. This helps to completely recharge the battery--which helps maintain the battery capacity. Some charge controllers, or battery chargers have an "equalize" mode which is controlled either manually or automatically. The SC-2030 now has the capability to do a manual equalization (when controlled by the TM-2030). This

TriMetric function is intended for use primarily for systems that require manual equalization--and reminds you to perform this after the programmed time. Placing the charger in "equalize" mode involves extra charging *after* the batteries have reached the "charged" criteria which allows the voltage to rise extra high for a period of time--for example the Trojan Battery Co. recommends charging to 15.5 volts (for 12V systems--double this for 24V systems) and keeping the batteries at that level for 2 hours. Other manufacturers may have different recommendations. It is usually advisable to check water levels in the batteries after equalization, as it causes some water loss. **After equalization has taken place you must manually reset the "days since equalized" display** (by pushing "reset" when the "days since equalized" extra data is displayed)--**this does not take place automatically.** This will turn off the "time to equalize" reminder, which will reactivate only after another equalization period has elapsed.

**For "liquid electrolyte" batteries: Every month or so check the water levels in the battery cells to make sure that the water covers the plates. It is not good for the batteries if the level drops below this level.**

**Copy this table and use it for recording the TriMetric TM-2030 History data.** This data can be helpful to a technician trying to diagnose a problem with your system, or to verify that it appears to be operating normally. Also copy the data from program modes P1, P2 and P3 and copy it to the second chart at bottom:

**To access this data:**

1. Set "Operating level" to L2 or L3 using program P7. See Section 5, Table 2, program item P7 on page 6 of these instructions for how to set to L2 or L3.
2. Push and hold "SELECT" down and watch display for "H1.1", then quickly release SELECT. If you miss the first time, just repeat until you succeed.
3. You will now observe data at "H1.1" on table. You can record this data in the box on this table just under "X.1". (near top left table).
4. Push "SELECT" to move down one row on table.
5. Push "RESET" (except for H1.1) to view and record all data moving to right (back in time) in table.
6. Push "SELECT" to move down one row, and then repeat steps 5 & 6 until table finished.

Date of record \_\_\_\_\_

	History Number	X.1 Most Recent	X.2	X.3	X.4	X.5 Least Recent
	H1.1 Cumulative A-hr	H1.1	X	X	X	X
<b>5 Charge-Discharge cycle info</b>	H2: Hours since cycle ended	H2.1	H2.2	H2.3	H2.4	H2.5
	H3: Length of Cycle-hours	H3.1	H3.2	H3.3	H3.4	H3.5
	H4: Amp-hour efficiency %	H4.1	H4.2	H4.3	H4.4	H4.5
	H5: Cycle Low % Full	H5.1	H5.2	H5.3	H5.4	H5.5
	H6: Cycle Min. volts	H6.1	H6.2	H6.3	H6.4	H6.5
<b>5 day Log Info</b>	H7: Day's Maximum Volts	H7.1	H7.2	H7.3	H7.4	H7.5
	H8: Day's Minimum Amps	H8.1	H8.2	H8.3	H8.4	H8.5
	H9: Day's percent amp-hr charge	H9.1	H9.2	H9.3	H9.4	H9.5

To aid in system analysis, view values programmed in Program modes P1, P2 and P3 and record them here: (See Section 5, Table 2, page 6 of these instructions.)

Program mode item	Value
P1: voltage "charged" setpoint	Volts
P2: current "charged" setpoint	Amps: % of P3 value
P3: Battery capacity setting	Amp-Hr