

MANUAL**Model: PT 12/24-5**

Solar Converters Inc. - Rev. A

Note: This unit is a dual voltage unit, both 12 and 24 V input and output, with a mixed 24 V input 12 V output option. Please ensure the signal connections are set up for your panel and battery voltages.

Signal Connections:

- 1) Output battery voltage selection,
 - if 12 V battery, do not connect small orange wire to anything
 - if 24 V battery, connect orange # 24 AWG wire to PV-
- 2) Panel Operating Voltage selection,
 - If 12 V panel operation, DO NOT connect purple wires to anything
 - If 24 V panel operation, connect purple #24 AWG wires to PV-
- 3) On/Off
 - Connect yellow #24 AWG wires to On/Off switch and PV-
 - Connect such that the yellow wires connect to PV- when unit is to shut off

NOTE: By connecting purple #24 AWG to PV- but not the orange #24 AWG, the unit will charge a 12 V battery @ 2.5 amps from 24 V panels.

1.0 Specification

Input Voltage: 0 - 50 DC volts PV Array, approx. 15.5V / 31V nominal operating
Current: 0 - 4 DC amps nominal,

Output Voltage: factory set 14.1V / 28.2 V
Current: 5 amps continuous, (provided sufficient solar power),

Connection: Power: #16 AWG Flying leads
Red: PV+
Black: PV-
White: Bat +
Blue: Bat -

Note: The red and white wires are common internally connected together.

Nominal Maximum power point tracking to optimize output power.

No User load overvoltage, regulates output voltage to "float" voltage even with no battery connected.

Efficiency: >94% over 20% charging load

No need for external blocking diode

Transient protected - input and output

Temperature range: -40C to +60C

Internal 7.5-amp battery fuse.

2.0 Power Connections

Warning: This unit operates from multiple **hazardous** energy sources. Ensure that all power sources are inactive before making any connections to this unit. Ensure proper procedures and the appropriate electrical codes are followed. To be serviced and operated only by qualified personnel.

2.1 Input Power Connection

DO THIS CONNECTION FIRST

Input voltage: 0 - 50 V DC
Input current: 4 A DC max. nominal

Using a wire of sufficient amperage for the input power (min. #14 AWG) connect the positive of the solar panel (through a strain relief clamp) to the PV + flying lead (RED) of the solar regulator. Similarly, connect the negative of the solar panel to the PV - terminal of the solar regulator to the PV- lead (BLACK).

2.2 Battery Connection

Output voltage: 14.1 / 28.2 V DC
Output current: 0 - 5 amps nominal

Warning: Ensure the battery is disconnected and/or safe operating procedures are followed when making battery connections. Extreme care must be taken to ensure the battery is not shorted. BE SAFE. Make sure all strands are inside their respective terminals. The battery must be fused. Qualified personnel only to connect and operate this unit.

Using wire of sufficient amperage for the load connection #16 AWG or better (preferred for regulation) connect the positive of the battery (through a strain relief) to the positive battery wire (WHITE) connection of the solar regulator. Similarly connect the negative of the battery to the negative battery wire (BLUE) of the solar regulator.




3.0 LEDs

The unit has LEDs to indicate when the battery is charging, and when the battery has reached its "full" voltage defined by the battery voltage is at its float value.

Charge: The unit is applying charge current to the output.

Full: The battery has charged to its float voltage.

Model: PT 12/24-5

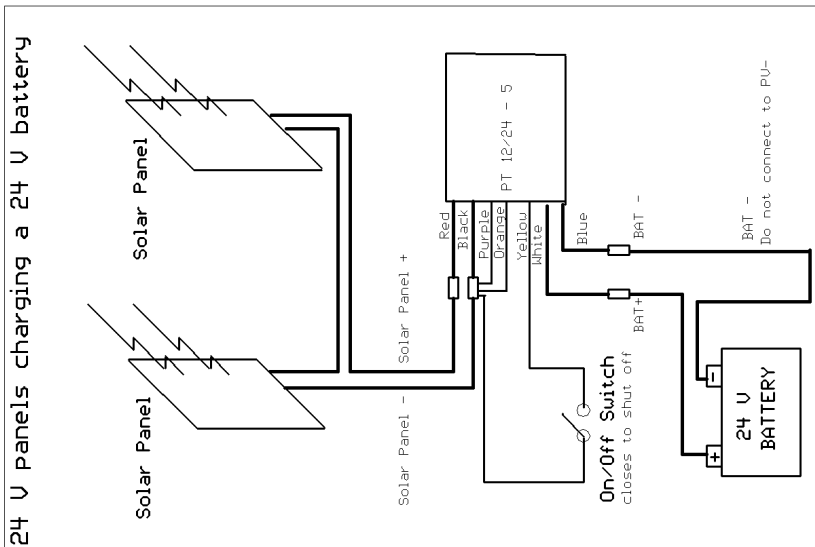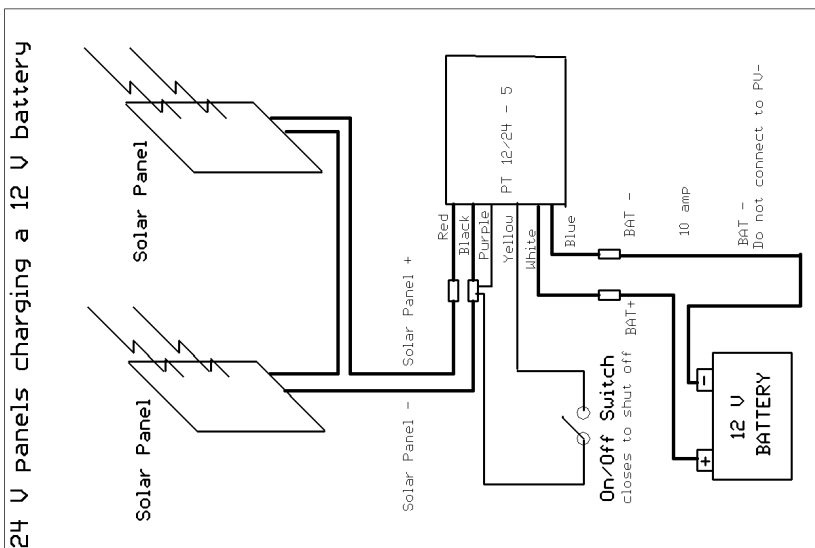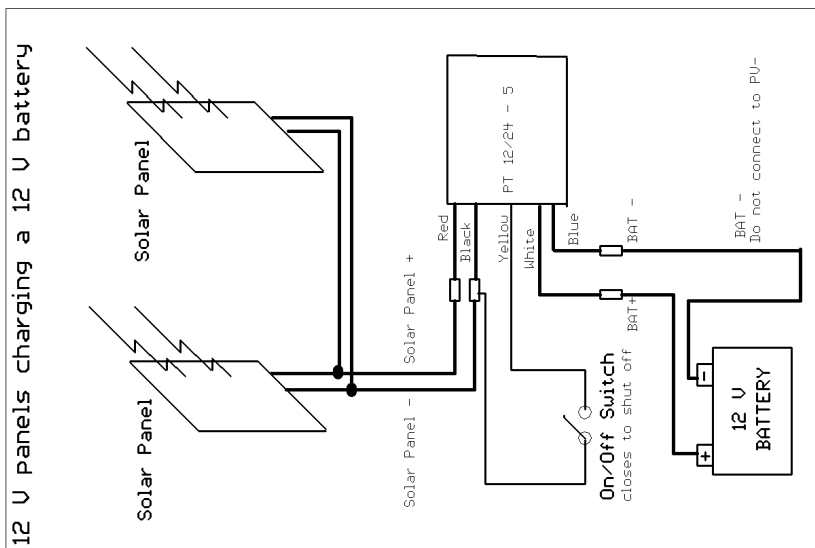

WARRANTY

The product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of purchase by a retail customer. The purchase date must be evidenced by a valid and original sales receipt. In lieu of sales receipt, factory will use code date on its label. Removal of the Solar Converters Inc. label or serial number will void the warranty.

Product liability, except where mandated by law, is limited to repair or replacement at the manufacturer's discretion. No specific claim of merchantability or use shall be assumed or implied beyond what is printed on the manufacturers printed literature. No liability shall exist from circumstances arising from the inability to use the product, or its inappropriateness for any specific purpose or actual use, or consequences thereof for any purpose. **It is the user's responsibility to determine the suitability of the product for any particular use.** Solar Converters Inc. shall not be liable for any damages or any kind including without limitation, special, incidental or consequential obligations and liabilities of Solar Converters Inc. and the remedies of Buyer set forth herein shall be Solar Converters Inc. sole and exclusive liability.

Failure to provide a safe and correct installation, safe operation, or care for the product will void the warranty. Personal safety, and compatibility with any other equipment is the ultimate responsibility of the end user. Any returned product that shows significant evidence of abuse may not be covered by this warranty. Installation must be preformed by a person with qualification to insure safe and effective operation and the installation thereof certifies that the installer has the technical qualifications to do so.

Solar Converters Inc. cannot guarantee the compatibility of its products with other components used in conjunction with Solar Converters Inc. products, including, but not limited to, solar modules, batteries, and system interconnects, and such loads as inverters, transmitters and other loads which produce "noise" or electromagnetic interference, in excess of the levels to which Solar Converters Inc. products are compatible. Solar Converters Inc. shall not assume responsibility for any damages to any system components used in conjunction with Solar Converters Inc. products nor for claims for personal injury or property damage resulting from the use of Solar Converters Inc. products or the improper operation thereof or consequential damages arising from the products or use of the products.

The warranties set forth herein are Solar Converters Inc. sole and exclusive warranties for or relating to the goods. Seller neither makes nor assumes any warranty or merchantability, any warranty fitness for any particular purpose, or any other warranty of any kind, express, implied or statutory. Solar Converters Inc. neither assumes nor authorizes any person or entity to assume for it any other liability or obligation in connection with the sale or use of the goods, and there are no oral agreements or warranties collateral to or affecting the sale of the goods.

WARRANTY CLAIM PROCEDURE

In the event of product failure, follow this warranty claim procedure.

1. Make sure the problem you are having is actually due to the suspected product and not some other part of the system. You may call technical support for advanced troubleshooting assistance.
2. If you determine that a Solar Converters Inc. product is actually defective, describe on paper, in detail the exact nature of the failure.
3. The product must be accompanied by proof of the date of purchase satisfactory to Solar Converters Inc.
4. Return the product and description to the business office address, along with your address and a daytime phone number. Purchasers must prepay all delivery costs or shipping charges as well as any other charges encountered, in shipping any defective Solar Converters Inc. product under this warranty policy. **No shipment will be accepted Freight Collect.**
5. Any return shipment from Solar Converters Inc. will be via Canada Post. Foreign shipments will ship best way. Special shipping arrangements are available at the customer's expense.